


## Fill Level Fill Control with Low and High Alarm and Heater Control

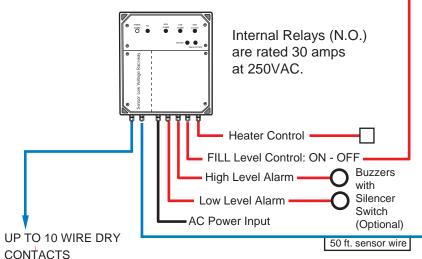

TO AUTOMATION SYSTEM - 2 for each function plus 2 for fault conditions. (see truth table for BAS wire quantities)


- \* Contact the factory for Custom Sensor requirements.
- \* See written specification for more details.

Waterline Controls

P.O. Box 12544 Scottsdale, Arizona 85260

Toll Free: 888-905-1892

Email: info@waterlinecontrols.com • www.waterlinecontrols.com

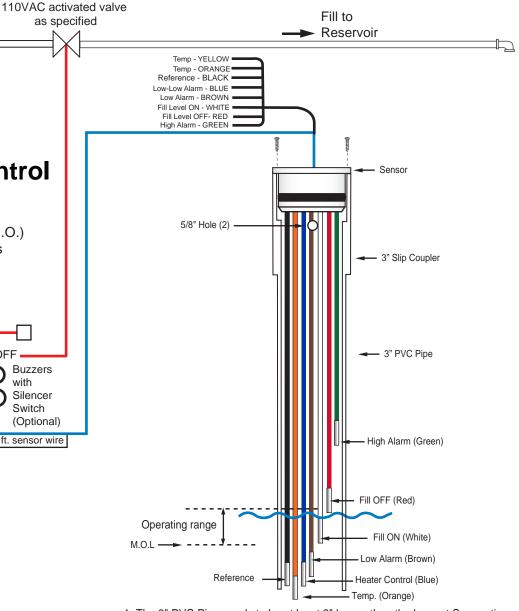

- 1. The 3" PVC Pipe needs to be at least 2" longer than the longest Sensor tip.
- 2. Adjustment occurs by moving the 3" PVC Pipe up or down and tightening the clamp so it rests on the Custom Fitting.