


PUMP I

Relay in the Waterline Unit can be used as Pilot relays to a 110 VAC coil for contactors properly rated for pump operation.

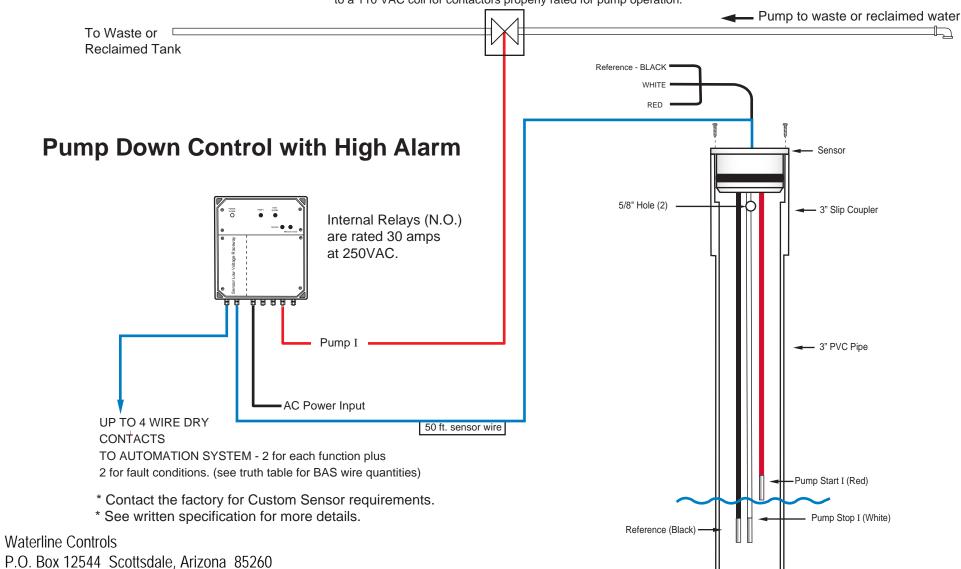

- Toll Free: 888-905-1892
- Function for Constanting a surface of the constanting of the constanti
- Email: info@waterlinecontrols.com www.waterlinecontrols.com

- 1. The 3" PVC Pipe needs to be at least 2" longer than the longest Sensor tip.
- 2. Adjustment occurs by moving the 3" PVC Pipe up or down and tightening the clamp so it rests on the Custom Fitting.